
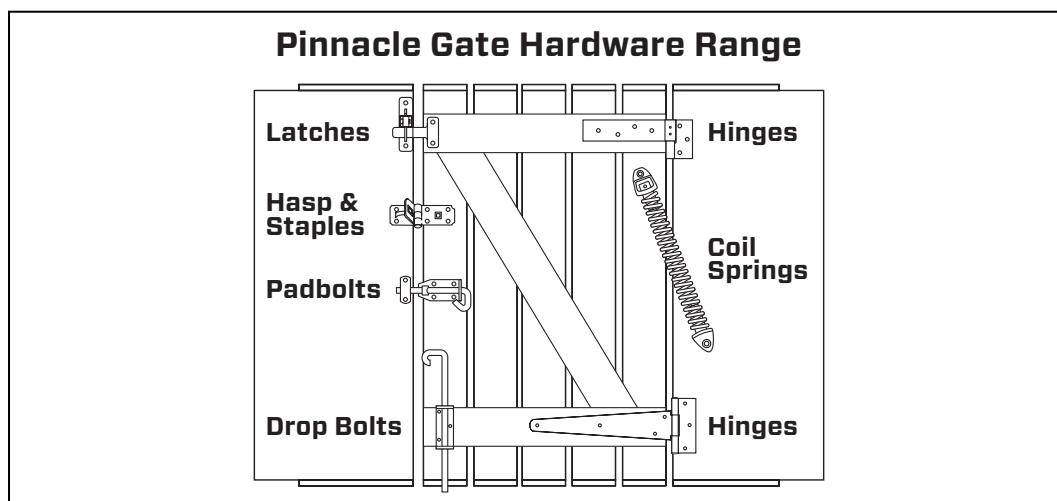


100mm Cabin Hook

Tools required: Pencil, No.2 Phillips screwdriver, drill and 2.5mm drill bit.

Installation instructions:

1. Position hook and catch in desired location ensuring it functions as intended.
2. Mark holes for catch and drill holes using a 2.5mm drill bit. Carefully fix catch to door ensuring you do not over tighten. Now repeat same process for hook.

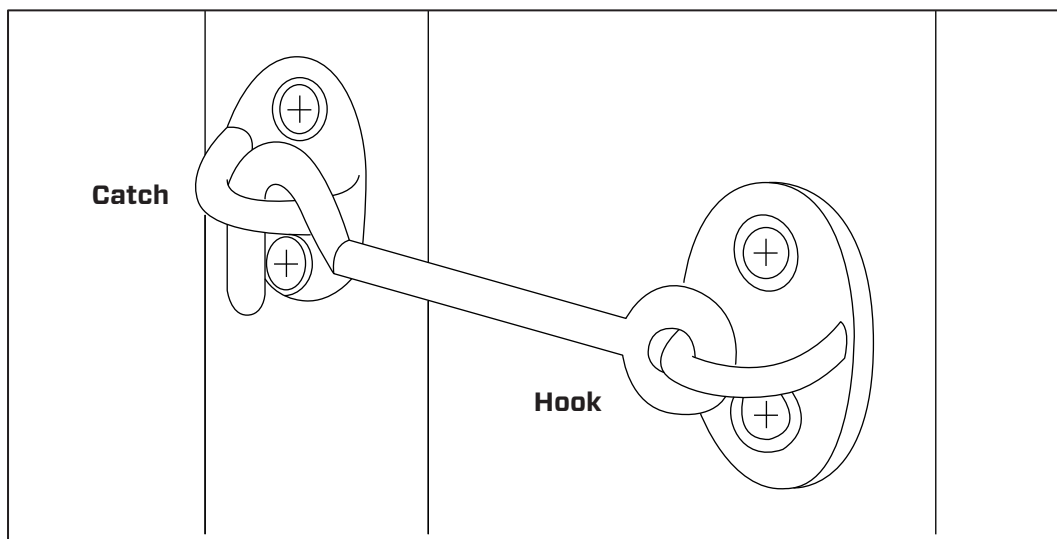

Corrosion Protection Chart

Finish:	Rating:	
Stainless Steel	Ultimate	🛡️ 🛡️ 🛡️
Galvanised	High	🛡️ 🛡️
Zinc Plated	Moderate	🛡️

Suitable for model no: GHS025, GHS027, GHS082.

CONNECT WITH US!
PINNACLE.NET.AU

