
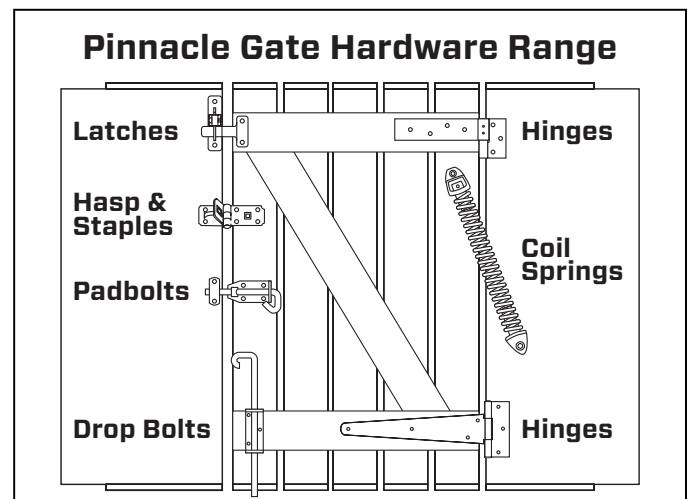


300mm Drop Bolt

Tools required: Pencil, No.2 Phillips screwdriver, drill and 3mm drill bit, plus tools to create the hole in the ground ie. 15mm drill bit etc.

Installation instructions:

1. Position the bottom guide bracket on the gate 50mm from the ground and mark the holes.
2. Drill 3mm pilot holes and install bottom guide bracket using the screws provided as per the below diagram.
3. Insert bolt into bottom guide bracket and use either the bolt or a marker to create a mark for the hole in the ground to hold the bolt. We recommend the hole should be a minimum of 30mm deep and 15mm in diameter.
4. Using whatever method best suits the ground, create a hole and insert the bolt, checking it fits and functions appropriately.
5. With the bolt in closed position, slide the top guide bracket on and position it against the gate approximately 240mm from the ground.
6. Mark the screw locations, drill 3mm pilot holes and install the top guide bracket using the screws provided.
7. Check the drop bolt functions correctly in open and closed positions.

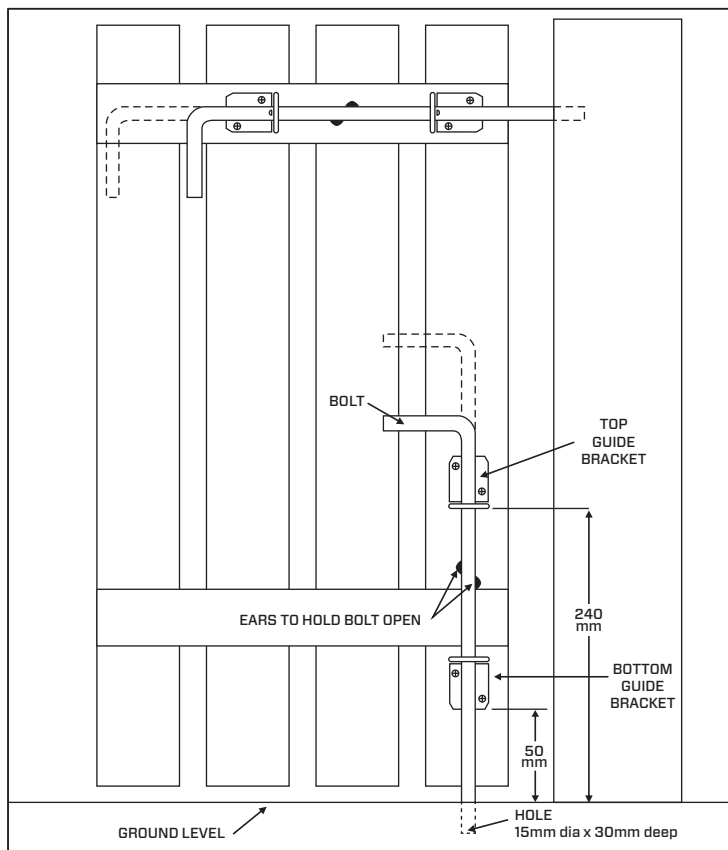

Corrosion Protection Chart

Finish:	Rating:
Stainless Steel	Ultimate
Galvanised	High
Zinc Plated	Moderate

Suitable for model no: GHS013.

CONNECT WITH US!
PINNACLE.NET.AU

